



TP368 +RS WIFI Radiator Actuator with Remote Sensor User Manual

1. Download the App and register your account:



Or search for "Tuya Smart " or "Smart Life" to download the App, then register your account.


2. Gateway connection:

Note: Make sure your smart phone and gateway are connected to the same wireless router.


Press and hold gateway button for 3-4s to access setting interface and make sure the two indicators keep blinking.




Enter Tuya app

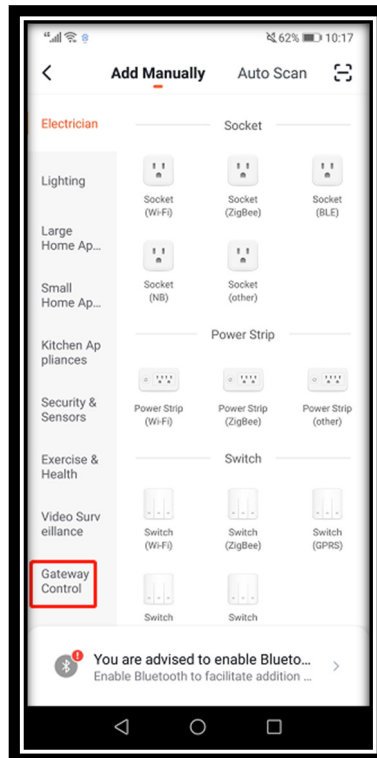


Choose Gateway Control

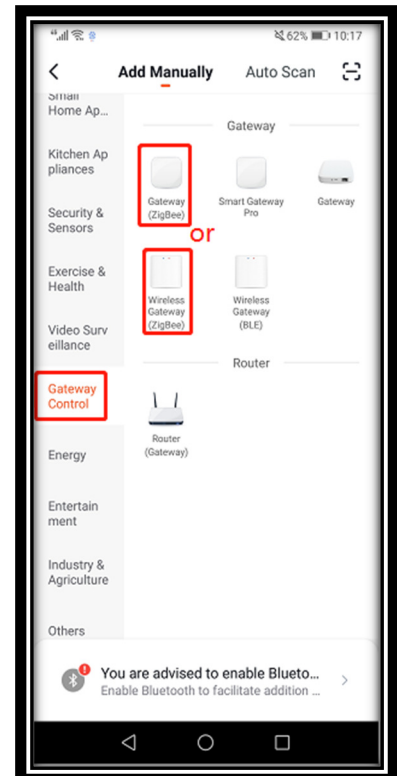


Choose gateway

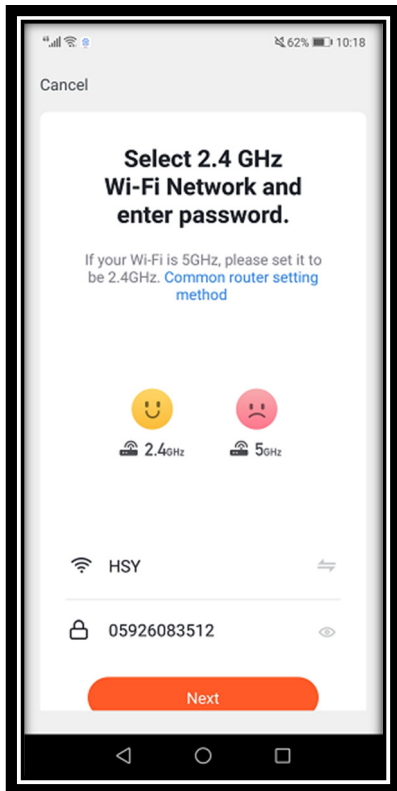

Enter WIFI password

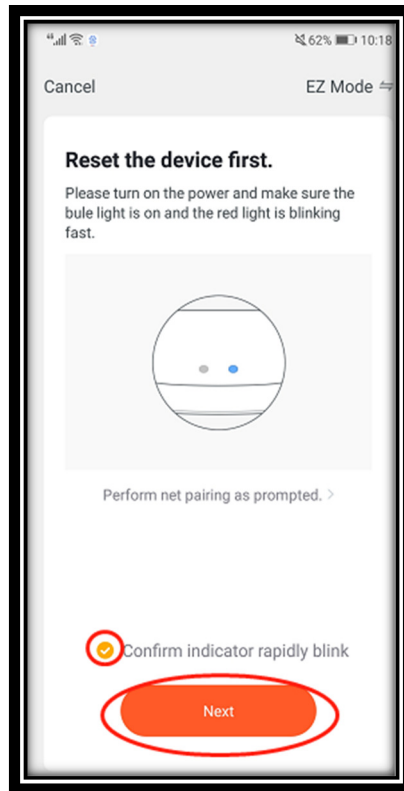


Keep the reset button on gateway for 5 -7 sec until to see the red light keep flashing rapidly and then tick and press next on the phone connecting as above

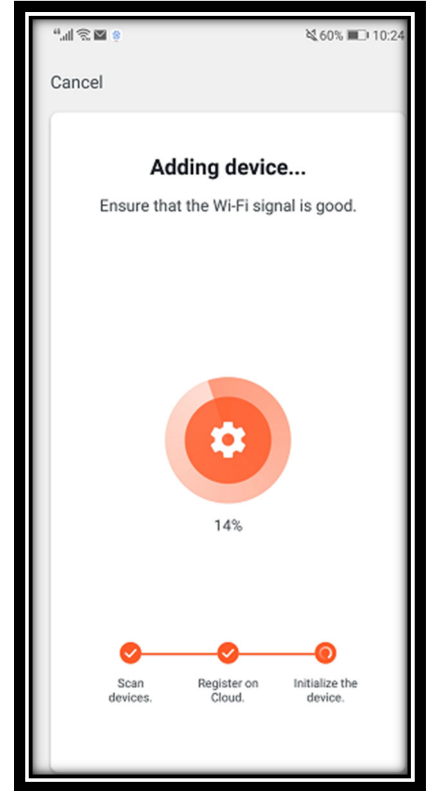

Gateway will connect as above




Added successfully and press Done

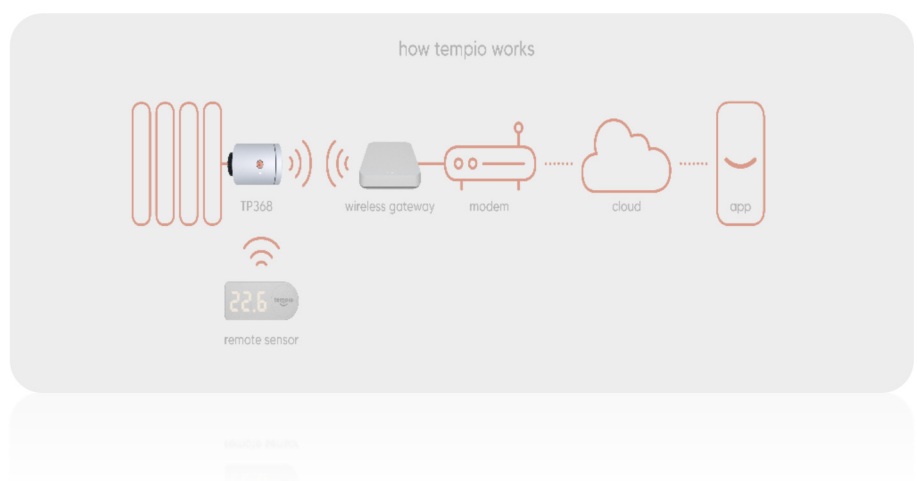


Connection sequence wireless gateway

3.HY368 TRV connection

After HY368 TRV has completed self-test, press  (in peach color round) about 3-5s to access setting interface, press and hold until  rapidly blink and connection begin and then follow the below procedure .

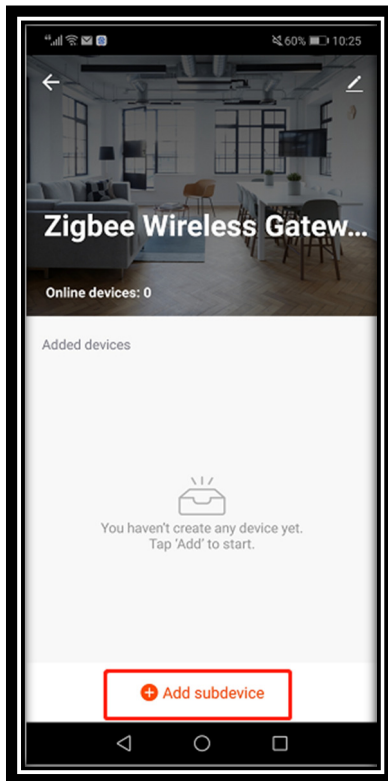


Add sub device

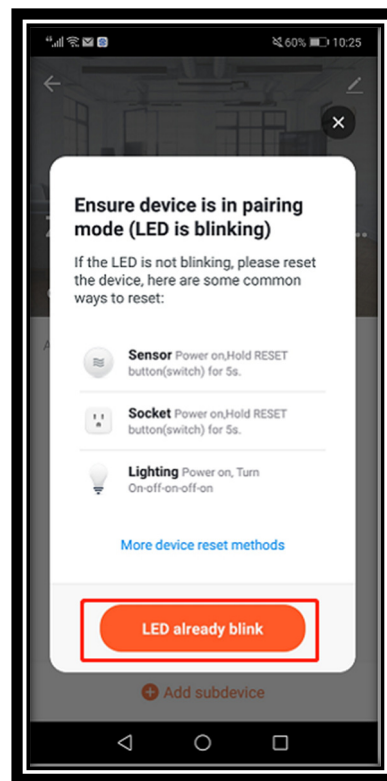

Press LED already blink



Searching device and press done

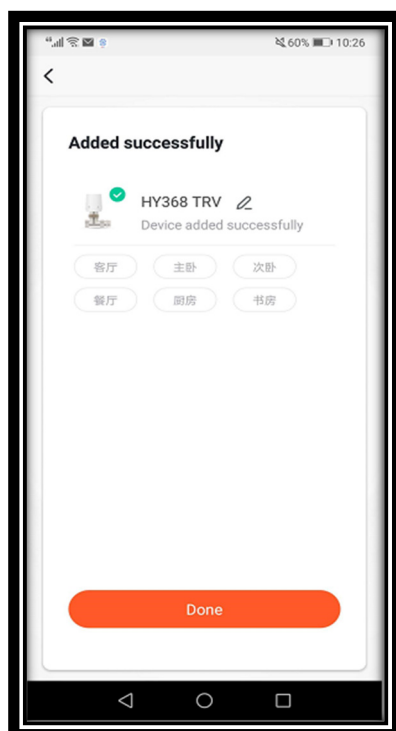


Added successfully and press Done




4. RS -Room Sensor connection.

The sensor will start operation after installation of 2*AAA batteries, touch the “Tempio” logo to change the LED operation.


Touch “Tempio Logo “ and hold about 3-5s to access setting interface until  rapidly blink on the sensor, and connection begin:

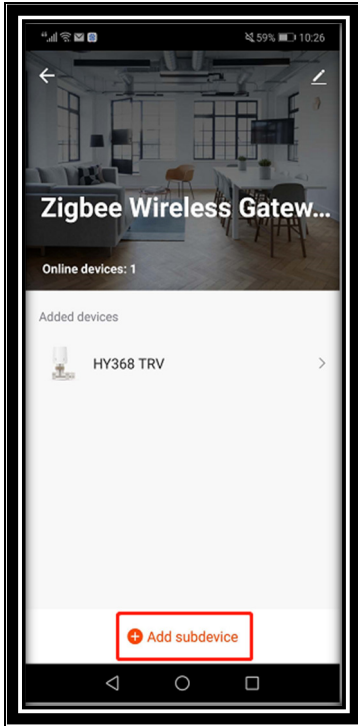

Add sub device

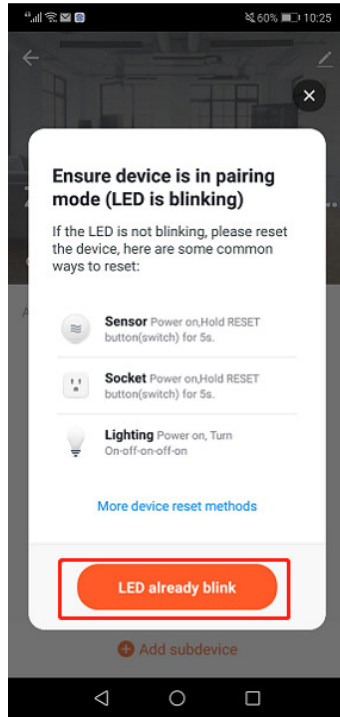


Press LED already blink

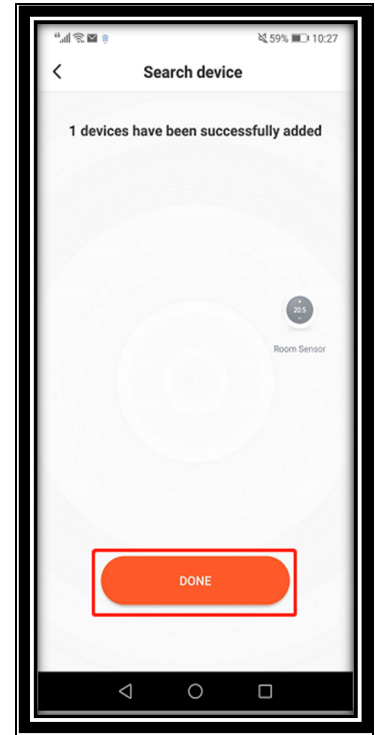

Searching device and press done




Added successfully and press Done

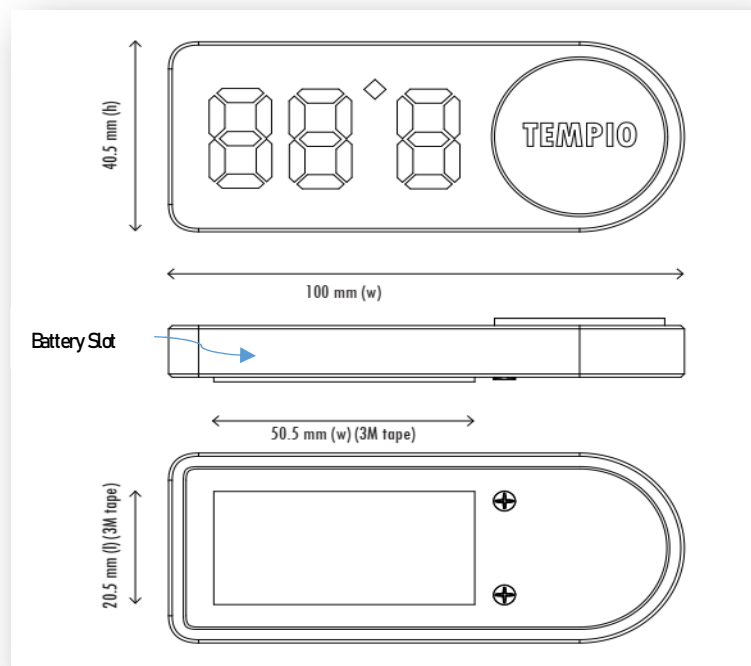


Room Sensor

5.Sensor Selection


After HY368 + RS TRV and Room sensor connected successfully, select room sensor

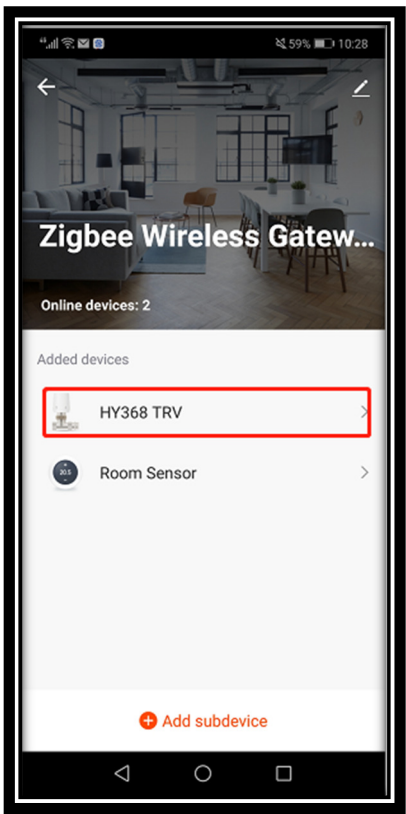


Press HY368 TRV

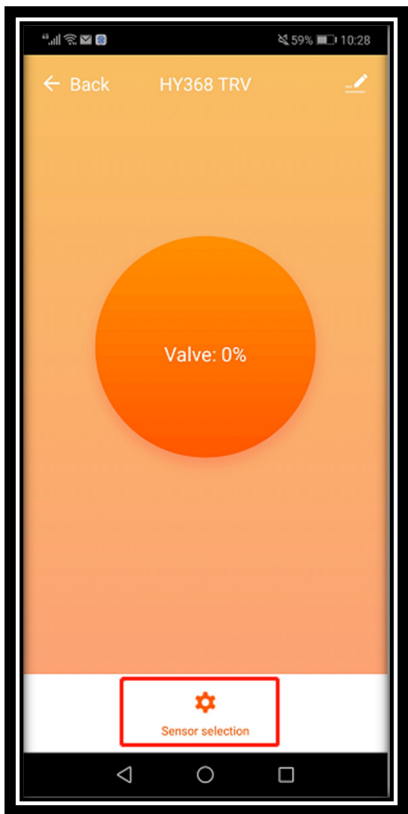


Press Sensor selection

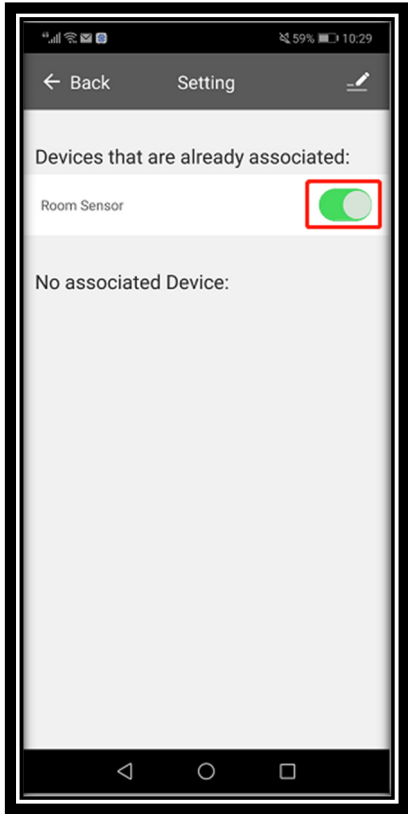


Press room sensor to be green

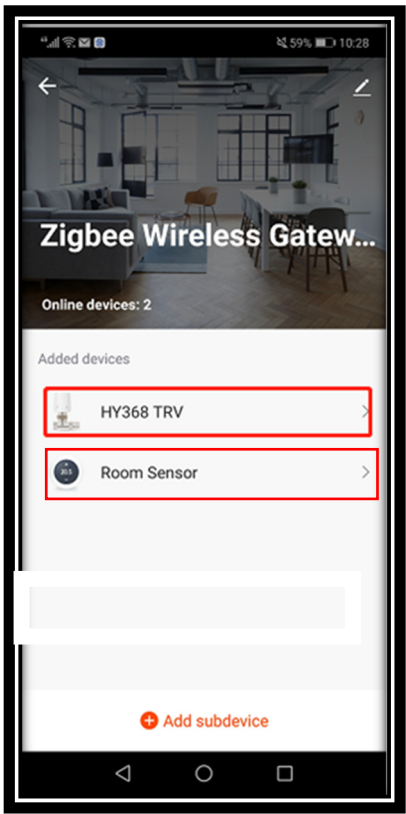

Press Room Sensor

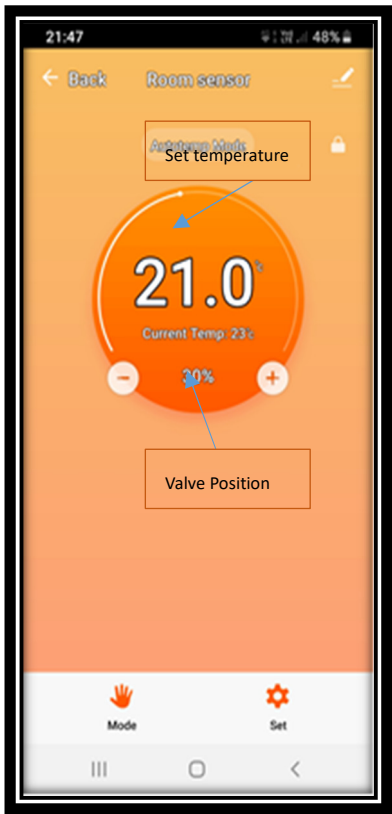


Room Sensor to set the room temp
Press Set to change the Temperature

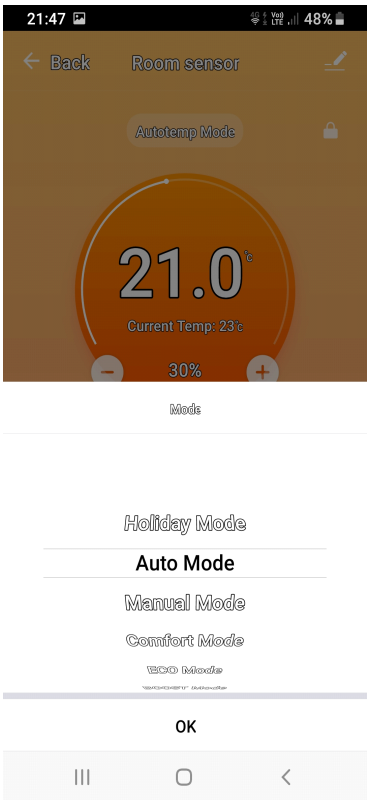


Press Mode to change the operation mode




Press Set key to setup

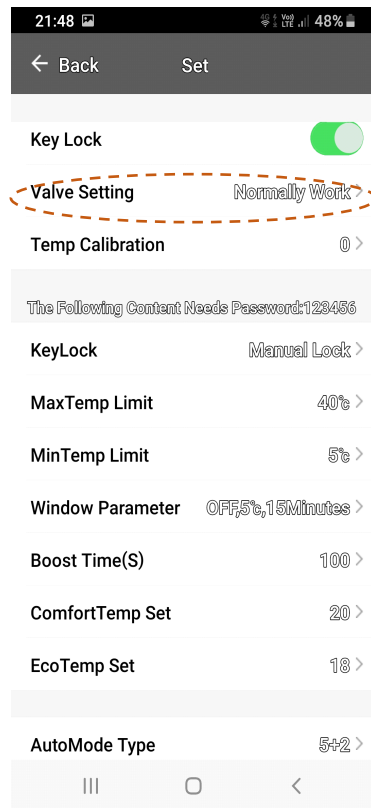


Press Temp Calibration for offset temp

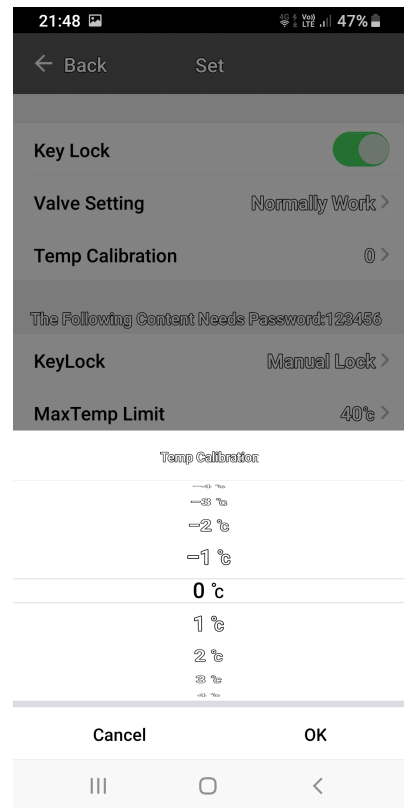

Set Temperature calibration

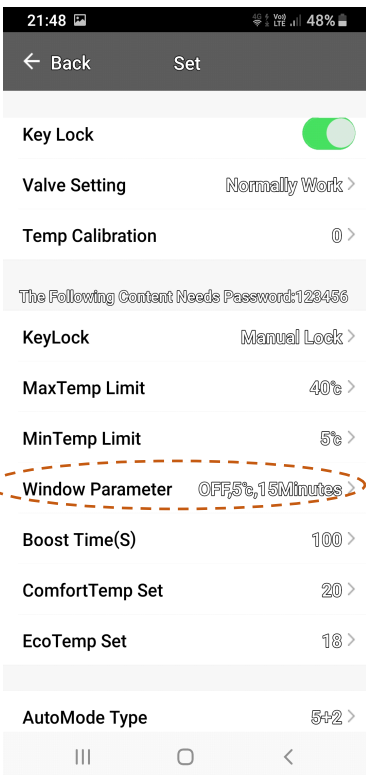

Press Window Parameter

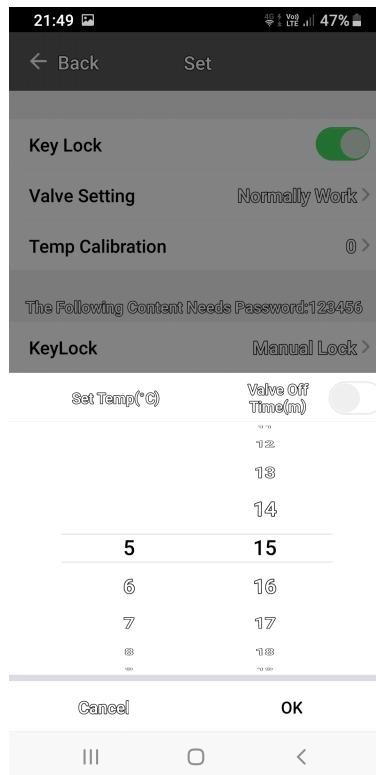

Select Set temp and Time to close off the valve

6. Voice Controls Operation



PS: * If you have any problems, please contact us at service@tuya.com

Tuya Smart offers the most comprehensive voice-controlled smart home experience with Alexa. Control your home lighting and other devices hands free. Just say it, Tuya Smart will obey.

Here's a step by step guide:

- (1). Download "Tuya Smart" app in Google Play or iOS App Store;
- (2). Launch the app and register a new account (or login if you're already registered);
- (3). Turn on Tuya Smart devices and connect them with "Tuya Smart" app;
- (4). IMPORTANT: You can rename the devices with Tuya Smart App. So if you rename a smart bulb "Livingroom Light", then Echo will get that same name after discovered the devices in Step 9;
- (5). Download Amazon "Alexa" app from Amazon Market, Google Play or iOS App Store, and connect Echo with "Alexa" app;
- (6). Search the Alexa Skills directory for "Tuya Smart";
- (7). Click Enable skill of "Tuya Smart", then input your account username, password and region on the linking page;
- (8). Talk to Echo "'Alexa,discover devices.". Wait till Echo says "Discover is completed";
- (9). Now all setup is done. Try talk to Echo to control your devices.

Here are the voice commands Tuya Smart has for HY368 +RS:

"Alexa, set the [living room] temperature to 22 degrees